


timeQplus Connectivity Diagrams*

timeQplus Diagramas de conectividad Diagrammes de connectivité de timeQplus


1) Connect Directly to PC - via USB cable (available only on timeQplus Biometric & Proximity models)

USB Directo

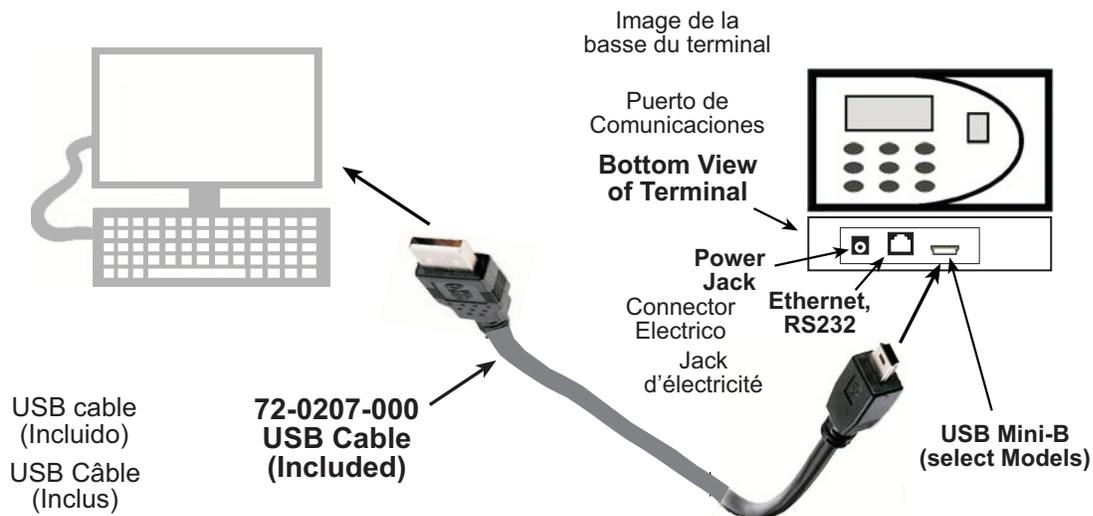

2) Connect Directly to PC - via RS232 cable (available only on timeQplus Biometric & Proximity models)

RS232 Directo

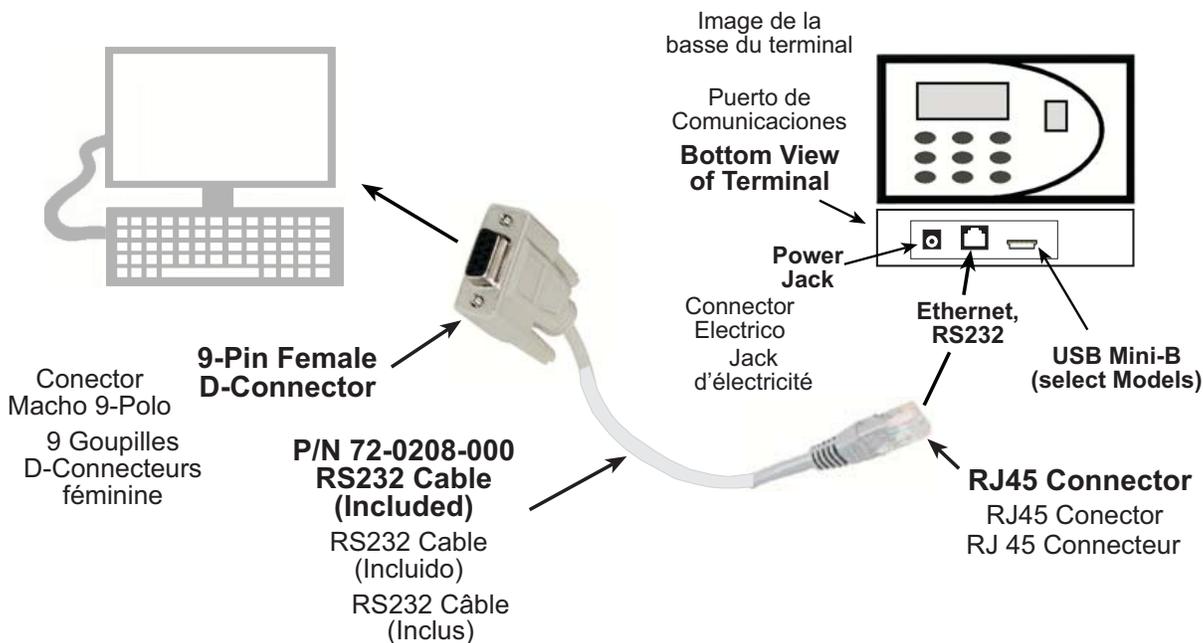


* Hardware manual available on the CD and online at www.support.acroprint.com

timeQplus Connectivity Diagrams*

timeQplus Diagramas de conectividad Diagrammes de connectivité de timeQplus

3) Connect Directly to PC - via Ethernet Crossover cable (available on timeQplus Biometric, Proximity, Barcode, Magnetic Stripe & FaceVerify models)

Ethernet Directo

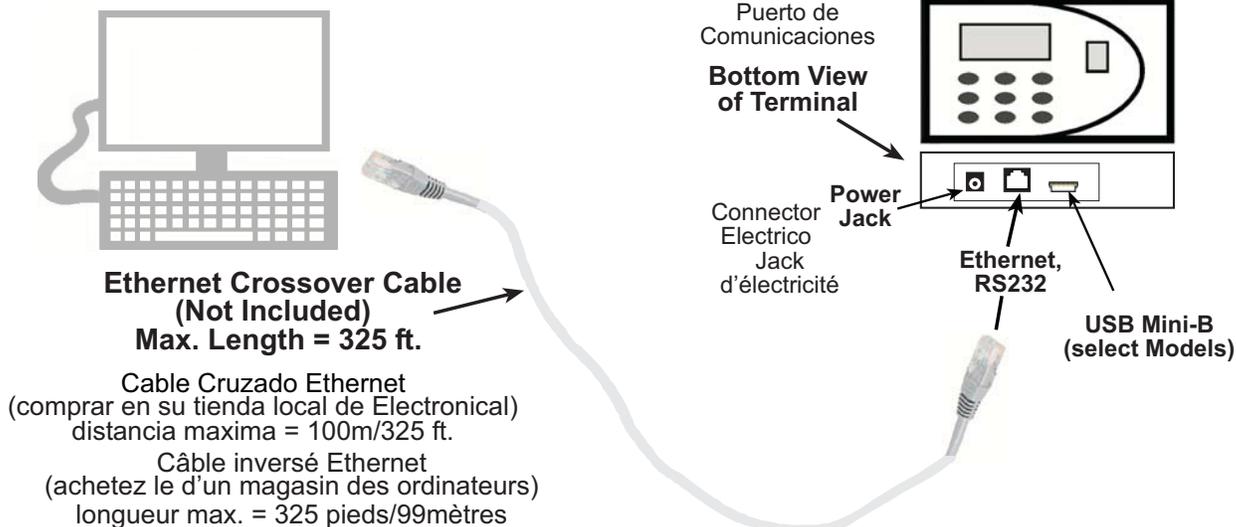

4) Connect to Ethernet on Local Area Network (available on timeQplus Biometric, Proximity, Barcode, Magnetic Stripe & FaceVerify models)

Conneccion a su Existente Red de Ethernet Connexion à un réseau existant Ethernet

